


ASSEMBLY INSTRUCTIONS

AI 2612




P/N: ANO 2612-1135

Description: A-LOK™ STRAIGHT FEMALE BULKHEAD SOLDER FOR .086/RG405 CABLE

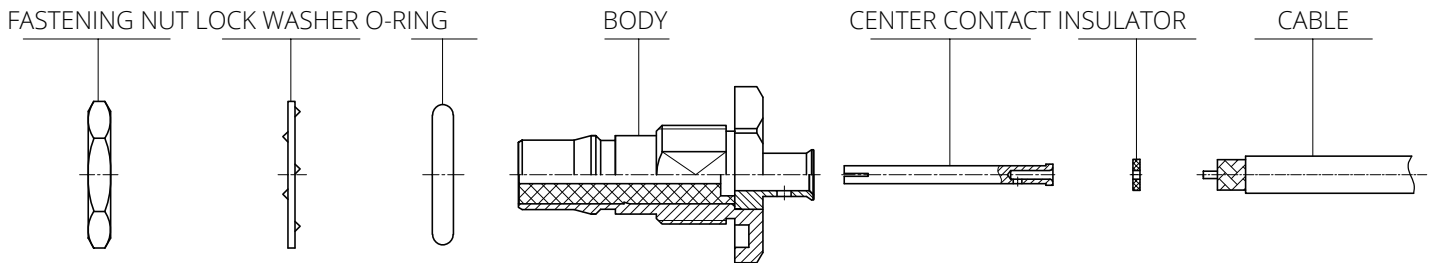


Step 1

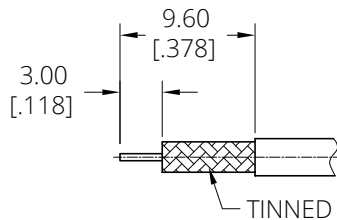

Step 1

- Strip the cable according to the dimensions, as shown.
- Tin inner braid of cable.


Step 2

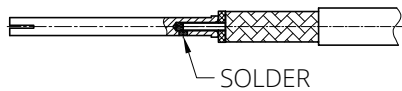

Step 2

- Slide the insulator, center contact onto the cable, as shown.
- Solder the cable inner conductor into the center contact.


Step 3

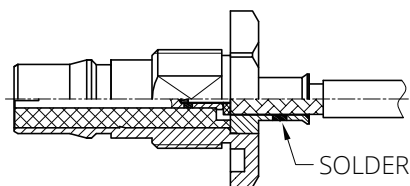

Step 3

- Install the sub-assembly into the body until it stops, as shown.
- Solder the cable braid into the body.

Step 4

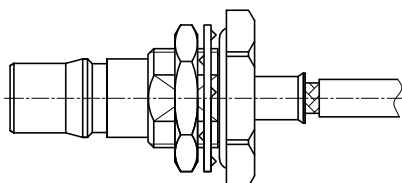

Step 4

- Slide the o-ring, lock washer and fastening nut into the connector body.